


K143	AC compressor clutch relay
A63	AC control module
S151	AC engine coolant temperature switch
S341	AC refrigerant triple pressure switch
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
Y177	Camshaft position (CMP) oil pressure valve
B132	Camshaft position (CMP) sensor
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
K46	Engine control (EC) relay
A35	Engine control module (ECM)
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
X28-II	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
B72-I	Heated oxygen sensor (HO2S) 1, bank 1
B72-II	Heated oxygen sensor (HO2S) 1, bank 2
B72-III	Heated oxygen sensor (HO2S) 2, bank 1
B72-IV	Heated oxygen sensor (HO2S) 2, bank 2
Y99	Idle air control (IAC) valve
T1	Ignition coil
S343	Ignition key warning switch
S1	Ignition switch
15	Ignition switch - ignition ON
50	Ignition switch - start signal
B184	Immobilizer read coil
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B30	Mass air flow (MAF) sensor
A11	Multifunction control module
H44	Overdrive indicator lamp
S159	Overdrive selection switch
K94	Oxygen sensor (O2S) system relay
S231	Power steering pressure (PSP) switch
K4	Starter motor relay
A198	Supplementary restraint system (SRS) control module
P7	Tachometer
B147	Throttle position (TP) sensor
B201	Transmission input shaft speed sensor
S249	Transmission range (TR) switch
H27	Transmission shift warning lamps
B181	Transmission turbine shaft speed (TSS) sensor
Y117	Transmission valve block


X91	Vehicle speed sensor (VSS) connector
P9	Vehicle speedometer

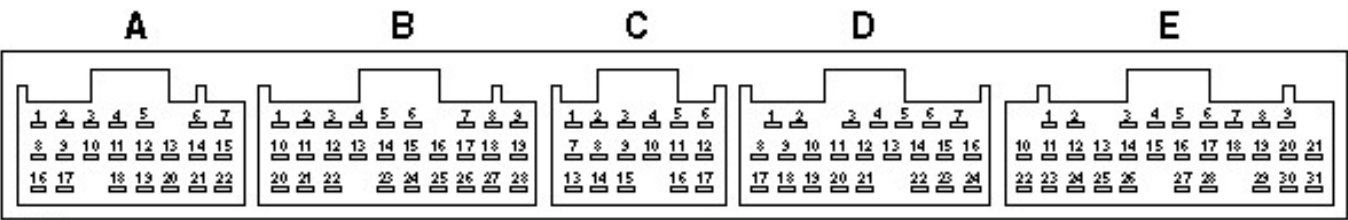

J.D104992

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

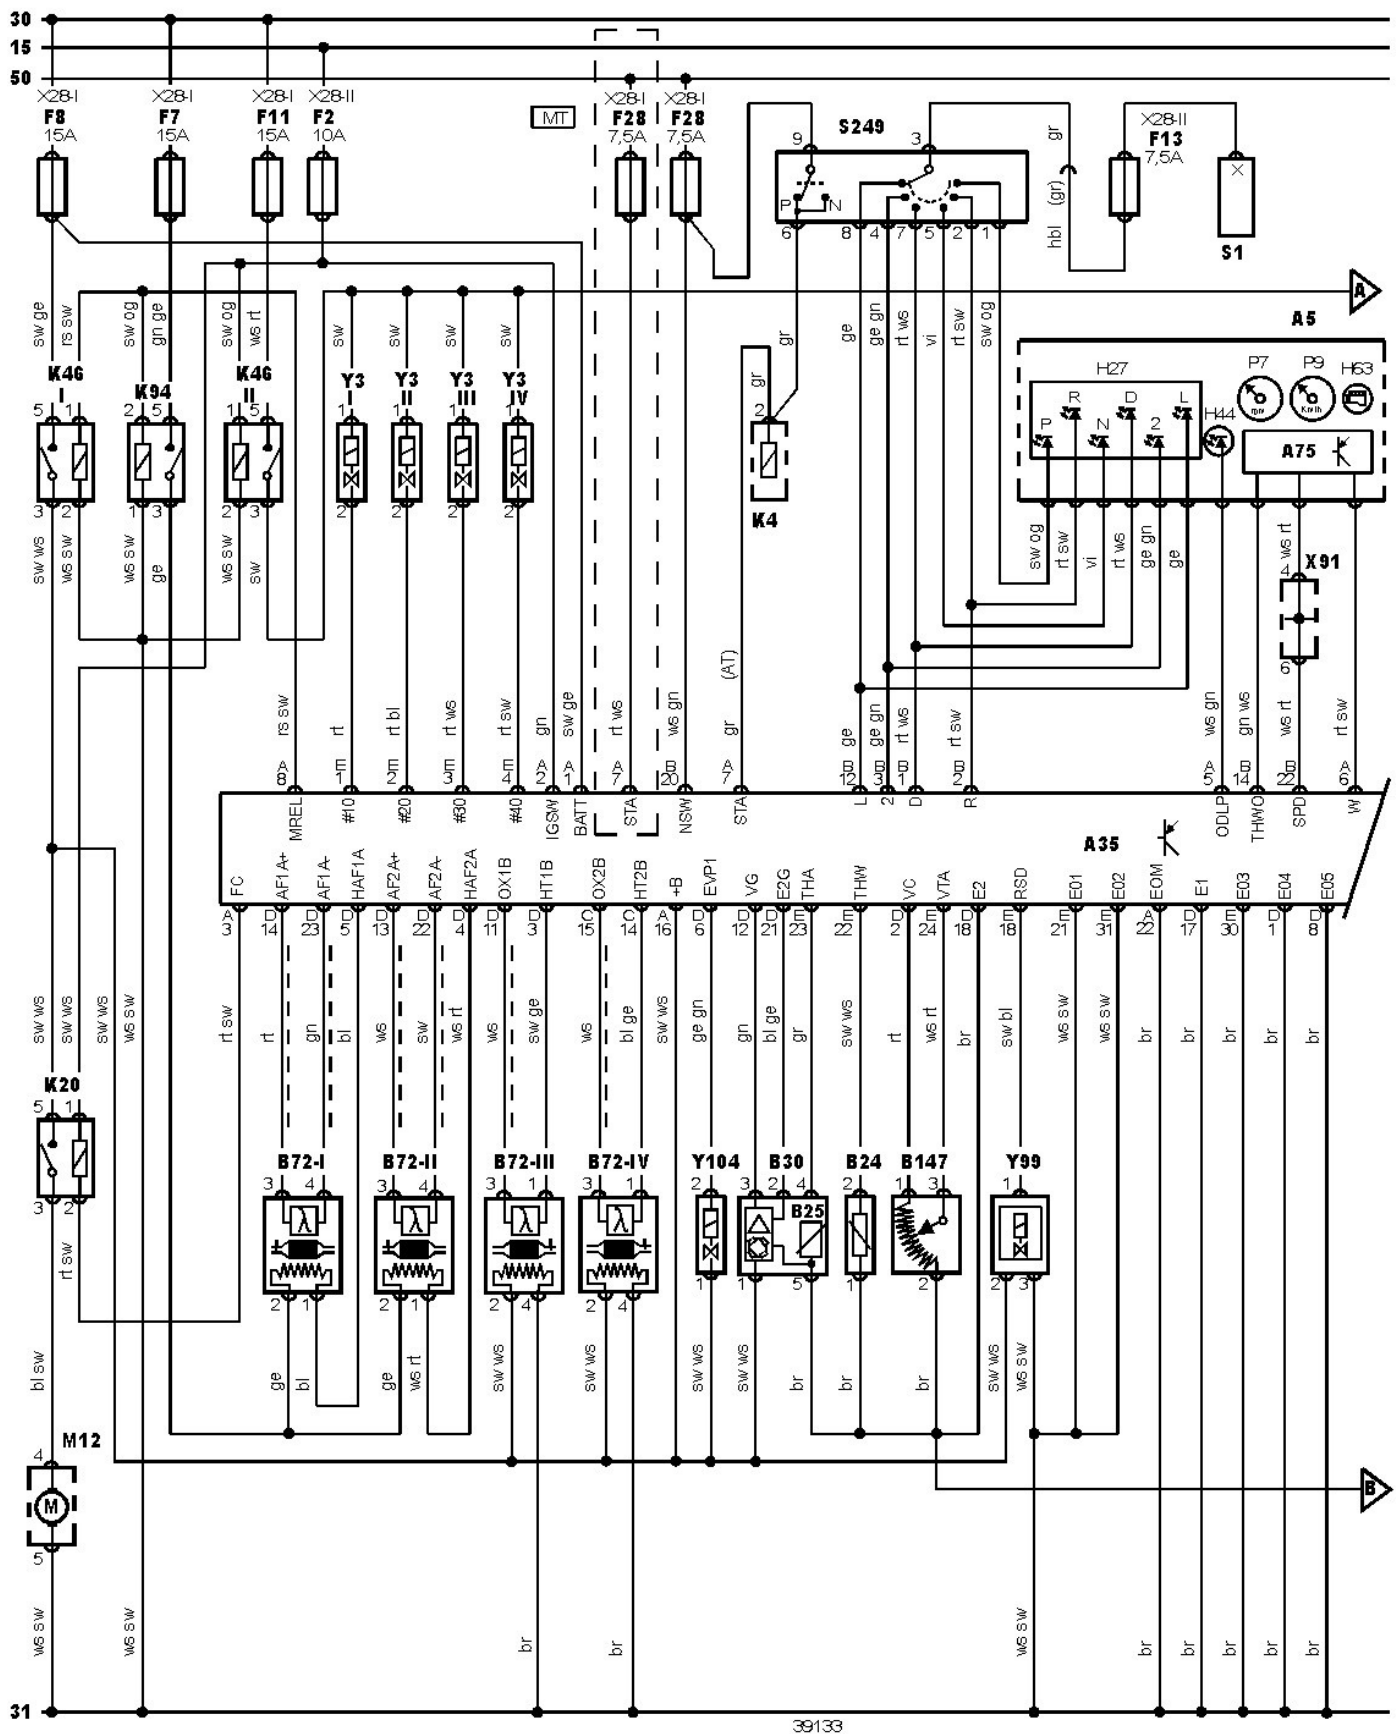

39133

